

TOWER®

over 100 YEARS of quality

Cordless Desk Fan

T614000

CORDLESS
AND
PORTABLE

RECHARGEABLE
BATTERY
OPERATION
2200MA

USB
POWERED

4
FAN
SPEEDS

QUIET
OPERATION

STYLISH
COMPACT
DESIGN

UP TO
3
HOURS
CORDLESS
RUN TIME



Call us first, we can help.

With advice, spares and returns.

Visit our website: towerhousewares.co.uk **Call: +44 (0)333 220 6066**
(8.30am to 6.00pm Monday-Friday)



SAFETY AND INSTRUCTION MANUAL

PLEASE READ CAREFULLY


*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.

Specifications:

This box contains:

Instruction Manual
Cordless Desk Fan
Micro USB Charging Cable

1. Air Outlet
2. Function Indicator Light
3. Function Button
4. Non Slip Feet
5. Air Inlet
6. USB Charging Inlet
7. USB Charging Cable

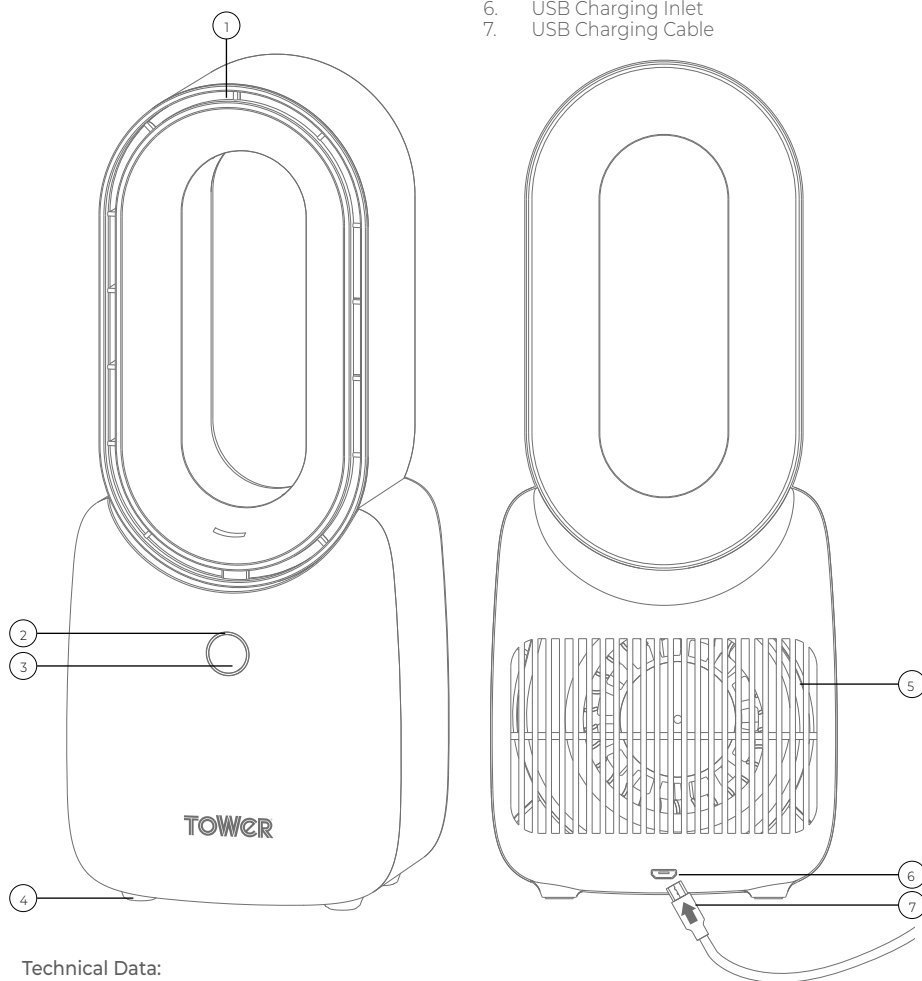

Technical Data:

Description:	Cordless Desk Fan
Model:	T614000
Rated Voltage:	5V
Frequency:	50Hz
Power consumption:	10W
Rechargeable Battery:	2200mA
Battery Run Time:	Up to 3 hours

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- DO NOT attempt to dismantle, repair or remould any part of the unit. This should only be done by a qualified service agent.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product. DO NOT use extension cords with the appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT carry the appliance by the power cord.
- DO NOT use the appliance outdoors.
- Never position the unit close to or on hot surfaces or open flames.
- DO NOT insert or allow foreign objects to enter any ventilation opening as this may cause an electric shock, fire, or damage to an individual or a property.
- DO NOT operate with wet hands.
- Retain this manual for future reference.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team:
+44 (0) 333 220 6066

Before First Use:

Read all instructions and safety information carefully before first use. Please retain this information for future reference.

1. Remove the appliance from the packaging and check for any visible signs of damage to the unit or charging cable.
2. Your appliance is now ready for normal use.
3. Dispose of the packaging in a responsible manner.
4. Place the unit on a firm and level surface.
5. Plug the micro USB charging cable into the charging interface at the rear of the unit. Plug the other end into a compatible device or 220V mains power adapter.

Note: Fully charge the unit before first use if using remotely and not operating whilst connected to an external power supply.

Battery Status:

1. The function indicator light will illuminate red whilst charging and go off once fully charged.
2. If there is insufficient battery power, the function indicator light will flash red 3 times and then the unit will automatically shut down.

Using Your Appliance:

1. Place the unit on a firm and level surface.
2. If operating without battery charge, connect the USB cord to the unit and suitable compatible power supply.
3. Touch the Function Button to power the unit ON.
4. Press the Function Button to cycle between the speed options:
 - Low** – Green Indicator Light
 - Medium** – Blue Indicator Light
 - High** – Light Blue Indicator Light
 - Off** – No Indicator Light
5. Press and hold the Function Button to enter 'Natural' mode, in which the fan will randomly change between the 3 speed settings. The Indicator Light will change colours accordingly. To exit 'Natural' mode, press the Function Button once.

Troubleshooting:

Questions	Answers
The unit will not work.	Ensure that the battery is charged or that the unit is connected to a suitable power supply.
The unit will not charge.	Ensure that the supplied cable is used and correctly connected to a suitable device or power outlet.

Cleaning & Care:

WARNING! Before cleaning and maintenance, switch the appliance off and disconnect from a power supply.

- Do not immerse any part of the appliance or power cord in water or any other liquid.
- Use a soft damp cloth to wipe the surface. Then dry with a soft cloth. Avoid using detergent, chemicals or abrasive cleaners as these may cause damage to the appliance.

Storage:

- Once the fan has been cleaned, store in a cool dry place out of reach of children.

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

TOWER®

over 100 YEARS of quality

thank you!

We hope you enjoy your appliance for many years.

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

The product must be returned to the retailer with proof of purchase or a receipt. The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit
www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team on:

+44 (0) 333 220 6066



0121.V2